

FAVORITES

Create Favorite Lists:

There are 12 pre-defined favorite named lists and you may create up to 5 additional Favorites Lists.

1. Press Menu. Arrow down to 'My TV' and then arrow right to 'Edit Favorites'. Press OK.
2. With your Favorite List highlighted, arrow down to move the channel list. Channels included in the Favorite List are marked with a P. Using the Arrow buttons, move through the channels and press OK to add or remove a channel to your Favorite List. Or, type in a channel using the number keys.
3. When done, press the Blue button to save your changes.

Using Favorite Lists:

1. Press FAV. By default, your list is 'All' channels.
2. Arrow up/down to choose a Favorite list. Press OK with a Favorite List selected, you will be in Favorites mode using that list.
3. Use either the Channel Up/Down button or the Arrow buttons to move between channels in a list. Or, use the number keys to select a channel. The 'Info Bar' shows the name of the active favorite list.
4. To leave a Favorite mode, press FAV. Arrow up/down to select 'All' and press OK.

PARENTAL CONTROLS

There are several ways to use Parental Controls. From the Main Menu, select My Settings. Arrow to the right, highlight Parental and press the OK button. You will then be in the Parental Controls menu to:

Change PIN:

Select the Change PIN category to enter your new PIN and confirm it. Until you change it, the default PIN is 0000.

Edit Locked Channels:

You can lock entire channels via the Edit Locked category so that it requires a PIN to view programming. You may prevent locked channels from showing in the channel guide via the Parental Control Options (locked channels would still be accessible using the number keys and entering a PIN).

Set Program Rating Limits:

To control the types of programming that can be viewed, you may set program limits based on motion-picture ratings (G, PG, R, etc.) or TV ratings (TV-G, TV-14, etc.) using the Set Ratings category. If you attempt to tune to a channel that is airing a program with a rating at or above your rating limit, you must enter a PIN to view the program.

Set Time Restrictions:

The Time Restrictions category allows you to set time periods per day where television access requires a PIN. These time restrictions may be set by selecting the Green button to Add Restriction under the Time Restrictions category.

Cancel Override:

Cancel Override category allows any previous PIN overrides for an extended period of time to be cancelled. Once the override has been cancelled, the parental PIN will need to be used for all Locked and Rated channels.

REMINDERS

Set Reminders: While viewing the guide, highlight the program where you want a reminder and press OK.

Potenza Remote Control Guide



Controlling The Remote

TV, AUD, DVD, VCR, STB

Use one remote to control multiple devices.

Setup

Use for programming sequences of devices controlled by the remote.

Skip Forward, Skip Back, REW, PLAY, FFWD, STOP, Pause, Record

In STB mode, these control the DVR functions. In other modes, these can control a VCR, DVD Player or PVR.

Menu

Displays the menu.

Guide

Opens the Interactive Program Guide.

Day +/-

Jump ahead or back one day in the Interactive Program Guide.

Red, Green, Yellow, Blue

Access additional features on your set-top box.

Vol +/-

Raise or lower the volume.

Mute

Turn the sound off or on.

Aspect Ratio *

Temporarily change the conversion mode from Original Size or Fit to Screen.

Input

In TV control mode, will change the input of the device you are controlling.

Power

Turn on/off a selected device.

Live

Return to watching live TV.

List

Display a list of recorded, future and series rules on your DVR.

Info

Display the current channel and program information. Press again for more detail.

Browse, Search, Arrow and OK

Navigate and select onscreen choices.

Exit

Exit the current screen.

Page +/-

Page up or down in lists and Interactive Program Guide.

Channel +/-

Changes to the next higher or lower channel.

On Demand

Access video on demand services.

Last

Recall the last channel you were watching.

FAV

View your favorite channels.

Number Keys (0-9)

Directly select a channel or enter options.



WHAT'S ON TV?

There's more than one way to see what's showing on TV.

Info Button:

Press Info and you will see the name and a description of the current program at the top of the screen.

OK Button:

Press OK to show the 'Now Playing' bar and you will see what program is currently playing.

Guide Button:

This is the most comprehensive view of what's on. Go ahead and page through...
...you're bound to find something to watch.

Browse Button:

Press Browse (right arrow) to show the channel you are currently tuned to at the top of the screen. At the bottom of the screen, the 'Info Bar' shows you the channel number, channel name, current date and time, program name, date and time the program airs, a progress bar, and the program that airs next.

*If Available



Potenza ST Remote

AUTOMATICALLY program remote:

1. Manually turn ON the device that you want to setup on the remote
2. Press and Hold <<SETUP>> until the mode key blinks twice
3. Press and release the mode key for device you wish to setup. The mode key stays lit.
4. Find your device and brand from the charts below and note the DIGIT key assigned to your brand. Press and hold down the DIGIT key for your device/brand while pointing the remote to the device.
5. Let go of the key when your device turns OFF. Setup for that device is complete.

TV	
DIGIT	BRAND
1	Insignia
2	LG
3	Panasonic
4	Philips/Magnavox
5	Samsung
6	Sanyo
7	Sharp
8	Sony
9	Vizio
0	Westinghouse

DVD/VCR	
DIGIT	BRAND
1	Insignia
2	LG
3	Panasonic
4	Philips/Magnavox
5	RCA
6	Samsung
7	Sharp
8	Sony
9	Toshiba
0	Vizio

AUDIO	
DIGIT	BRAND
1	Bose
2	Denon
3	LG
4	Onkyo
5	Panasonic
6	Philips
7	Pioneer
8	Samsung
9	Sony
0	Yamaha

MANUALLY program remote with codes:

1. Turn on a device and, if applicable, insert video media, (e.g., cassette or disc).
Note: Please read steps 2 through 5 completely before proceeding. Highlight or write down the codes and device you wish to program before moving on to step 2.
2. On the remote control, press a device key once (i.e., VCR, DVD, AUD, TV, or STB); it will blink once.
3. Press and hold SETUP until the selected mode key blinks twice, then release SETUP.
4. Use the "setup code list" to locate the type of device and brand name and then enter the first four-digit code for your device. If performed correctly, the selected mode key will blink twice.
NOTE: If the selected mode key emits a long blink, the entry is invalid. Repeat steps 2 through 4 and try entering the same code again.
5. Aim the remote control at the device and press POWER once. The device should turn off. If it does not, repeat steps 2 through 4, trying each code for your brand until you find one that works. If it still does not respond, try searching for the code (see setup code list)
NOTE: If the device does not have a POWER key (e.g., DVD and VCR), press the PLAY key.

Setup Code List

Audio – Amplifier (A) -----	
Anthem	2220
Classe	1915
Denon	2134, 2706
Halcro	1934
Harman/Kardon	3045
Krell	2463
Marantz	2138, 2463
Parasound	1934

Audio – Accessory (M) -----	
Acoustic Research	2226
Altec Lansing	2251
Apple	1115
Definitive Technology	3645
Denon	2502
Dynavox	3231
Haier	3516
Harman/Kardon	3517
iLive	3175
Jamo	2228
JBL	3535
JVC	3049
LG	3217
Martin Logan	3526

Audio – Accessory (M) Cont. -----	
Onkyo	3326
Panasonic	3409
Philips	2675
Polk Audio	2228, 3429
Proficient	3661
Roku	1828
Samsung	2660
Sharp	3097
Sony	2610
SpeakerCraft	3661
Toshiba	3627
Vizio	2454
Yamaha	2021, 2116
Zvox	2332, 2334

Video – Accessory (N) -----	
ABS	1272
Alien Ware	1272
Apple	2615
CyberPower	1272
D-Link	3671, 1554, 1731, 2186
Gateway	1272
Hewlett Packard	1272
Howard Computers	1272

Video – Accessory (N) Cont. -----	
Hush	1272
iBuypower	1272
Iomega	2558
LG	3373
Linksys	1272
Logitech	3272
Magnavox	3339
Media Center PC	1272
Microsoft	2049, 1272
Mind	1272
Netgear	3324, 3292, 2033, 2036
NiveusMedia	1272
Northgate	1272
Popcorn Hour	2260
RCA	3335
Ricovision	1272
Roku	3061, 2371
Seagate	2698
Sony	2713, 1272
Stack 9	1272
Systemax	1272
Tagar Systems	1272
Toshiba	1272

Video – Accessory (N) Cont. ----	
Touch	1272
Viewsonic	1272
Vizio	3670
Voodoo	1272
Western Digital	2558
Xbox	2049
ZT Group	1272
Audio – Receiver (R) -----	
Aiwa	0158, 0189, 0121, 1089, 1641
Altec Lansing	2595
AMC	1077
Anam	1609
Apex Digital	1774
Arcam	1189, 0189
Audiotronic	1189
Bose	1933, 1629, 1229, 1841, 1253
Carver	1189, 0189, 0121, 1089
Coby	1263, 1389, 2698, 2748

Audio – Receiver (R) Cont. -----

Curtis	1389
Denon	2857, 1360, 2516, 2820, 2279, 3001, 3347, 3380, 2247, 1142
Dynex	2971
Fisher	1801
Garrard	0463
Gateway	1517
Glory Horse	1263
GPX	3214
Harman/Kardon	2241, 1304, 2443, 0110, 0189, 0891, 1306, 2670, 3418
Hitachi	1801
iLive	2013
Insignia	2169, 2175, 1030, 1077, 2472, 1751, 1893, 2126, 2474, 2929, 2966
Integra	1805, 1320, 2503, 2730, 0135
iSymphony	2442
JBL	2241, 0110, 1306
JVC	1676, 2239, 1374, 3115, 2331, 0074, 1263, 1495, 1871, 2040
Kenwood	1313, 1570, 1293, 0186
Klipsch	3092
LG	2197, 2676, 2284, 1293
Linn	0189
Magnavox	1189, 1269, 0189, 1089, 1831
Marantz	1189, 1269, 0189, 1089, 1289, 2114
McIntosh	1289
Micromega	1189
Musicmagic	1089
Myryad	1189
Nakamichi	1313
NexxTech	1751
Norcent	1389, 1751
Nova	1389
Onkyo	1805, 2730, 1320, 2503, 2451, 1531, 0135
Optimus	1023, 0186
Panasonic	2967, 1633, 2452, 1763, 1548, 1275, 1288, 3309, 3055, 2745, 1764, 2221, 1308, 1518, 1676, 2105, 1316
Philips	2459, 2311, 0189, 1831, 1269, 1189, 0891, 1266, 1089
Pioneer	1935, 2612, 1123, 1023, 1384
Polk Audio	0189, 1289, 2244, 2270

Audio – Receiver (R) Cont. -----

Proscan	1254
RadioShack	1263
RCA	1609, 1023, 1254, 2041, 2426, 2611, 2655, 2719, 3281, 3297, 0054, 1123
Rio	1869
Samsung	1868, 2809, 1295, 2713, 3154, 1500, 2137, 1304
Sansui	0189, 1089
Sanyo	1469, 1801
Sharp	0186
Sharper Image	1263
Sherwood	1077, 1517, 1653, 1905, 2169
Sonic Blue	1869
Sony	1622, 1759, 0158, 2172, 1758, 1822, 2475, 1058, 2522, 3257, 3372, 1441, 1258, 1158, 1858, 1658, 2216, 1558, 2671, 3456
Stereophonics	1023
Sunfire	1313
Teac	0463
Technics	1633, 1308, 1518
Thorens	1189
Toshiba	1123, 1788
Victor	0074
Wards	0158, 0189, 0054
Yamaha	2061, 2467, 3030, 0176, 1276, 0376, 1331, 1815, 3313, 3580, 1375, 1376, 2455, 0186, 3267, 3270, 3626
Zenith	2197, 1293, 1869
Television (T) -----	
Acer	1339
Admiral	0093, 0463
Advent	1570
Affinity	3716, 3717
Aiko	0092
Aiwa	1362
Akai	0812, 0702, 1675, 0765, 1385
America Action	0180
Anam	0180
AOC	1589, 2087, 1365, 1590, 2014, 2479, 3707, 3720
Aomni	1623
Apex Digital	2397, 0748, 0879, 0765, 1217
Astar	1548, 1738
Asus	3340
Audiovox	1564, 0451, 0180, 0092, 1276, 1766, 1769, 1865, 1868, 2121, 2413, 3065

Television (T) Cont. -----

Auria	2087, 2277
Aventura	0171
Bell & Howell	0154
Berkshire	0047
Bradford	0180
Broksonic	0463, 1938
Candle	0056
Carver	0054
Celebrity	0000
Celera	0765
Champion	1362
Changhong	0765
Citizen	0060, 0092, 0056
Clarion	0180
Coby	3478, 3627, 2315, 2344, 2306, 2314, 2326, 2338, 2340, 2345, 2347, 2348, 2560, 3629, 1538
Commercial Solutions	1447, 0047
Concerto	0056
Contec	0180
Craig	0180, 3423
Crosley	0054, 0000
Crown	0180
Curtis	2397, 3577, 2352, 2466, 2855, 3228, 1326
Curtis Mathes	0702, 0054, 0093, 0060, 0047, 0154, 0451, 0145, 1661, 0056, 1347, 1959
CXC	0180
Cytron	1326
Daewoo	1661, 0661, 0092, 0154, 0451
Dell	1264, 1080, 1863, 2491
Denon	0145
Digital Lifestyles	1765
Disney	1665, 1892
Dumont	0017
Durabrand	0178, 0171, 0463, 0180, 1665
Dynex	2049, 1463, 1785, 1810, 2184
Electric Mirror	3166
Electroband	0000
Electrograph	1755, 1623
Electrohome	0463, 1570, 1670
Element	1886, 1687, 2183, 2964, 3559
Elite	1457
Emerson	1864, 1394, 1886, 0171, 0178, 0154, 0451, 0463, 0180, 1661, 1665, 1913, 1944, 1963, 2183, 2776, 3559
Emprex	1765
Envision	1589, 2087, 1365, 2014
Epson	1122
ESA	0812, 0171, 1944, 1963

Television (T) Cont. -----

Fisher	0154, 1362
Fluid	2964
Fujitsu	0809
Funai	0000, 0171, 0180, 1271, 1904, 1963
Futuretech	0180
Gateway	1756, 1755
GE	1447, 0178, 0047, 0051, 0451, 0765, 1347, 1547
GFM	1864, 1886, 0171, 1665, 1963
Gibraltar	0017
Go Video	1823, 1831
GoldStar	0178, 0056
GPX	3196
Grunpy	0180
Haier	1753, 1749, 2309, 1748, 3382, 1570, 2293
Hallmark	0178
Hannspree	1348, 1351, 2786
Harley Davidson	1904
Harman/Kardon	0054
Harvard	0180
Havermy	0093
Hello Kitty	0451, 2776
Hewlett Packard	1642
Hisense	3519, 2183, 0748, 1314, 1660, 2098
Hitachi	1643, 0145, 1145, 0056, 0679, 1576, 1904, 2756
iLo	1394, 1463, 1286, 1665, 1684, 1990
Infinity	0054
Initial	1990
Insignia	2049, 1641, 1326, 1564, 1423, 2002, 1785, 1892, 2184, 2417, 2751, 0171, 0463, 2088, 1963, 1660, 1517, 1385, 0017
Inteq	0017
iSymphony	3094, 3118, 3382
JBL	0054
JCB	0000
JCM	2256
Jensen	1326, 2541
JVC	1774, 1601, 2271, 2264, 0053, 0650, 0463, 0731, 1253, 1670, 1923, 2321
KDS	1498, 1687
KEC	0180
KLH	0765
Konka	1385, 1831
KTV	0180
Lasonic	3198
LG	1423, 2731, 2358, 2424, 0178, 3397, 1265, 2834, 3098, 2612, 0017
Lloyd's	1904
LodgingStar	3147

Television (T) Cont. -----		Television (T) Cont. -----		Television (T) Cont. -----		Television (T) Cont. -----	
Luxman	0056	Phillips	1454, 1867,	Seleco	1351	Vizio	1758, 3758,
LXI	0156, 0054,		2372, 1744,	Sens	1865		2757, 3358,
	0178, 0047,		1455, 2374	Sharp	2360, 0818,		2512, 1756,
	0154		2597, 1866,		0093		0864, 0885
MAG	1498, 1687		0690, 0054,	Sheng Chia	0093	Wards	0156, 1156,
Magnasonic	1913		2704, 1394,	Sherwood	1399, 3061		0054, 0000,
Magnavox	1867, 1454,		0171, 1365,	Sigmac	3423, 3477		0178, 0060,
	1455, 2597,		1944, 1990,	Signature	0054		0047, 0154,
	2372, 1866,		2902	Sole	1623		0017, 0051,
	0054, 0171,	Pioneer	1457, 0679,	Sony	0810, 0000,		0180, 0056,
	0706, 1365,		1260, 1398		1300, 0834,		1347
	1904, 1913,	Planar	1589		1685, 1904	Waycon	0156
	1944, 1963,	Polaroid	1523, 1498,	Soundesign	0178, 0180	Westinghouse	1712, 3579,
	1990, 2902,		0765, 1276,	Soyo	1831		0885, 3382,
	2708, 1755,		1286, 1314,	Spectroniq	1498, 1687		1300, 1577,
	0051		1326, 1385,	Squareview	0171		3094, 3470,
Marantz	1454, 0054,		1538, 1687,	SSS	0180		0889, 1282,
	1398		1766, 1767,	Starlite	0180		2293, 0451,
Matsushita	0250, 0650		1769, 2002,	SunBriteTV	1610, 2337,		1217
Maxent	1755, 1757		2121		2528, 2935	White Westinghouse	0463, 1661
MB Quart	1868	Portland	0451, 0092,	Superscan	0864, 0093,	Wyse	1365
Megatron	0178, 0145		1661		1944	Zenith	1423, 0017,
Memorex	0463, 0178,	Prima	1753, 1749,	Supersonic	1753, 2104,		2358, 2731,
	0154, 0150,		1785		3154, 3593		0000, 0178,
	1570, 1665,	Prism	0051	Supreme	0000		0047, 0463,
	1670, 1785,	Proscan	1447, 0047,	SVA	0748, 1963		1265, 1145,
	1892, 1924,		1347, 2147,	Sylvania	1864, 1394,		0145, 0092,
	1927, 1938		2183, 2256,		1886, 0171,		1661, 1365,
MGA	0178, 0150		3577		1944, 1963,		1904, 2612
Midland	0047, 0017,	Proton	0178		1271, 0054,	Video – VCR (V) -----	
	0051	Proview	1498, 1687		1314, 1665,	Accurian	0000
Mintek	1990	Pulsar	0017		1913, 3563	Admiral	0048
Mitsubishi	1250, 0150,	Quasar	0250, 1291,	Symphonic	1394, 0171,	Adventura	0000
	1797, 0093,		0650, 0051,		0180, 1904,	Aiwa	0037, 0000
	0178		1924, 1927		1913, 1944	Allegro	0039
Motorola	0093	RadioShack	0178, 0047,	Syntax	1610, 1144,	American High	0035
MTC	0060, 0056		0154, 0180,		1240	Audiovox	0037
Multitech	0180		0056, 1904	Tandy	0093	Calix	0037
NAD	0156, 1156,	RCA	1447, 2746,	Tatung	1756, 1286	Canon	0035
	0178, 0056		2434, 2932,	TCL	2434, 3183	Carver	0081
Naxa	2104, 3154,		2247, 2187,	Technics	0250, 0051	Citizen	0037
	3382		0047, 1781,	Techwood	0051, 0056	Craig	0037
NEC	0056, 1398,		0093, 3577,	Teknika	0054, 0060,	Crosley	0081, 0000
	1704, 1797,		3147, 2855,		0180, 0150,	Curtis Mathes	0060, 0035,
	2293		2002, 1959,		0092, 0056		0162
NetTV	1755		1547, 1385,	Telefunken	0702, 0056	Daewoo	0045
Nexus Electronics	2183		1347, 0679,	Thomas America	1904	Denon	0042
Nikko	0178, 0092		0051, 1661,	TMK	0178, 0056	Direct TV	0739
Norcent	1589, 0748,		0090	TNCi	0017	Durabrand	0039
	1365, 1590	Realistic	0178, 0154,	Toshiba	1524, 1656,	Dynatech	0000
Norwood Micro	1286		0180, 0056		2724, 0156,	Electrohome	0037, 0043
NTC	0092	RevolutionHD	1623		1156, 0822,	Electroponic	0037
NuVision	1657, 2158	Runco	0017, 1398		1256, 2006,	Emerex	0032
	1946	Sampo	1755		0060, 0154,	Emerson	0037, 0000,
Olevia	1610, 1144,	Samsung	2051, 0812,		1265, 2684,		0043, 0593,
	1240		0702, 0060,		1959, 1945		1593
Onwa	0180		1060, 0766,		1704, 0650,		
Optimus	0250, 0650,		0814, 1959,	TruTech	1369	Fuji	0035, 0033
	0154, 1913,		2596, 0650,		1665, 1723,	Funai	0000, 0593,
	1924, 1927		0178, 0056		2066		1593
Optoma	1348	Sansui	0171, 0463,	TVS	0463	Garrard	0000
Optonica	0093		1463, 1670,	US Logic	1286	GE	0060, 0035,
Orion	0463, 1463,		1892, 1904,	Venturer	1865, 1868		0202
	1938, 3540,		1938, 3540,	Victor	0053	GFM	1593
Panasonic	1480, 1291,		3564	Vidikron	0054, 1398	GoldStar	0037, 1237
	0250, 0650,	Sanyo	1142, 0154,	Vidtech	0178	Gradiente	0000
	2264, 1927,		1362, 0054,	Viewsonic	2087, 2014,	Harley Davidson	0000
	1924, 1947,		0088		2049, 0864,	Harman/Kardon	0081
	0051, 1941,	Sceptre	0878, 1217,		1755, 1564,	Headquarter	0046
	1310, 1271,		1360, 1599,		0885, 1330,	Hitachi	0000, 0042,
	1946		2337, 2506,		1365, 1542,		0593
	2104		2528		1578, 1627,	Hughes Network	
Park	0156, 0178,	Scotch	0178		2277, 3706	Systems	0042
Penney	0060, 0047,	Scott	0178, 0180	Viore	1684, 2104,	Humax	0739
	0051, 1347	Sears	0156, 0054,		2352, 3094,	Instant Replay	0035
	1394, 0054,		0178, 0047,		3118, 3382	JVC	0067
Philco	0171, 1271,		0171, 0154,	VisionQuest	3380	KEC	0037
	1665, 1963		0056, 1904	Vivitek	1369	Kenwood	0067
		Seiki	0178, 2964,			Kodak	0035, 0037
			3559, 3560			Lloyd's	0000

Video – VCR (V) Cont. -----

LXI	0037
Magnasonic	0593
Magnavox	0035, 0039, 0081, 0000, 0593, 1593
Marantz	0035, 0081
Marta	0037
Matsushita	0035, 0162
MEI	0035
Memorex	0035, 0162, 0037, 0048, 0039, 0000, 0046, 1237
MGA	0043
Minolta	0042
Mitsubishi	0067, 0043
Motorola	0035, 0048
MTC	0000
Multitech	0000
NEC	0067
Nikko	0037
Olympus	0035
Optimus	1062, 0162, 0037, 0048, 0593
Panasonic	1062, 0035, 0162, 0616
Penney	0035, 0037, 0042, 1237
Pentax	0042
Philco	0035
Philips	0739, 0035, 0081
Pilot	0037
Pioneer	0067
Polk Audio	0081
Presidian	1593
Proscan	0060, 0202
Pulsar	0039
Quarter	0046
Quartz	0046
Quasar	0035, 0162
RadioShack	0000
Radix	0037
Randex	0037
RCA	0060, 0035, 0042, 0202
Realistic	0035, 0037, 0048, 0000, 0046
ReplayTV	0616
Runco	0039
Samsung	0045
Sanky	0048, 0039
Sansui	0000, 0067
Sanyo	0046
Scott	0045, 0043
Sears	0035, 0037, 0000, 0042, 0046, 1237
Sharp	0048, 0848
Signature	0035
Sonic Blue	0616
Sony	1232, 0032, 0035, 0033, 0000, 0636
STS	0042
Sylvania	0035, 0081, 0000, 0043, 0593, 1593
Symphonic	0000, 0593, 1593
Tashiko	0037
Teac	0000
Technics	0035, 0162
Teknika	0035, 0037, 0000
Thomas America	0000
TiVo	0739, 0636

Video – VCR (V) Cont. -----

Toshiba	0045, 0043
Totevision	0037
Vector	0045
Video Concepts	0045
Videomagic	0037
Villain	0000
Wards	0060, 0035, 0048, 0039, 0081, 0033, 0045, 0000, 0042, 0046
XR-1000	0035, 0000
Zenith	0037, 0039, 0033, 0000

Video – DVD (Y) -----

Accurian	0675, 1416
Anthem	2820
Apex Digital	0672, 0717, 0755, 0794, 0797, 1004, 1020, 1056, 1061
Arrgo	1023
Audio Authority	2555
Audiovox	0717
B & K	0655
BBK	1224
Bel Canto Design	1571
Blaupunkt	0717
Blue Parade	0571
Broksonic	1419
California Audio	0490
Labs Cambridge	
Audio	2808
Cinea	0831
CineVision	0833
Citizen	2116
Coby	2494, 0778, 0852, 1086, 1107, 1165, 1351
Craig	0831
Curtis	2235, 3401, 3403
CyberHome	0816, 1023, 1129, 1502
Daewoo	0705, 0833, 1234, 1242
Denon	2258, 1634, 2748, 0490
DigitalMax	1738
Digix	3850
Disney	0675, 1270, 3246
Dual	1068
Durabrand	1023, 1127
Dynex	2596
Electrohome	2116
Emerson	0675, 2213
Fisher	0670
Funai	0675
Gateway	1158
GE	0522, 0717
GFM	0675
Go Video	1075, 0741, 0744, 0833, 1044, 1158
GoldStar	0741
GPX	2235
Greenhill	0717
Grundig	0539, 0705
Harman/Kardon	0702, 1229, 2927, 0582, 3228
Hello Kitty	0831
Hitachi	0573, 0664
Hiteker	0672
Humax	1500, 1588

Video – DVD (Y) Cont. -----

Initial	0717
Insignia	2095, 2596, 2428, 0675, 0741
Integra	2147, 0627, 0571, 1769, 1634
Irradio	0646
JBL	0702
JVC	1164, 0623, 2365, 1602, 0558, 0867, 1275, 2855, 3025
Kenwood	0534, 0490
KLH	0717, 1020, 1149
Lenoxx	1127
Lexicon	2545
LG	0741, 1602
LiteOn	1058, 1158, 1416, 1738
Loewe	0511
Magnavox	0675, 0539, 0646, 1354, 1506, 0503
Marantz	2414, 0539, 2481, 3444
McIntosh	1273, 1533
Memorex	2213, 0831, 1270, 2331, 3153
Messiah	2396
Entertainment	
Microsoft	2083, 0522
Mintek	0717
Mitsubishi	1521
NAD	0741
Naxa	2235
Nesa	0717
Norcent	1003, 1107
Nyko	2340
Olevia	2331
Onkyo	2147, 1627, 0627, 0503, 1769, 2215, 2562
Oppo	2545, 0575, 1224, 2185
Panasonic	1641, 0490, 3641, 1579, 1762, 0703, 0503
Philco	0675
Philips	2056, 0539, 2434, 0646, 2084, 1354, 0503, 0675, 1158, 1267, 1340, 1506
Pioneer	2442, 0142, 1571, 0571, 0525, 0631, 1512, 2854
Polaroid	1020, 1061, 1086
Polk Audio	0539
Presidian	0675, 1738
Pro Vision	0778
Proceed	0672
Proscan	0522
RCA	0522, 2213, 0571, 2919, 2587, 1500, 0717, 1769
RE-BL	2555
Rotel	0623

Video – DVD (Y) Cont. -----

Samsung	0199, 0573, 2069, 1075, 1573, 1470, 2329, 2369, 2113, 1044, 2269, 2489, 2556, 3492, 0490
Sanyo	0670, 0873
Schneider	0646
Sensory Science	1158
Sharp	2250, 0630, 0675, 1419
Sherwood	1043, 3052, 3925
Shinsonic	0533
Sony	1516, 1633, 0533, 1033, 1533, 0864, 1070, 0772, 1536, 1540
Sylvania	0675
Symphonic	0675
Technics	0490, 0703
Theta Digital	0571
TiVo	1503
Toshiba	2705, 0503, 3157, 2277, 1510, 1608, 1154, 1588, 1503, 1769
Urban Concepts	0503
Viore	2553
Vizio	2563, 1226
WB Electronics	2555
Xbox	0522, 2083
Yamaha	0497, 2298, 0539, 0490, 0646, 0545, 0817, 1354, 1416, 3995
Zenith	0503, 0741