 
 


Working with Favorites

1. Your services allows you to create Favorite Lists
 - a. Surf selected list of channels
 - b. Create up to 5 customized lists
 - c. Additional pre-set lists
 - i. Sports, children's programming, etc.
2. Create a favorites list

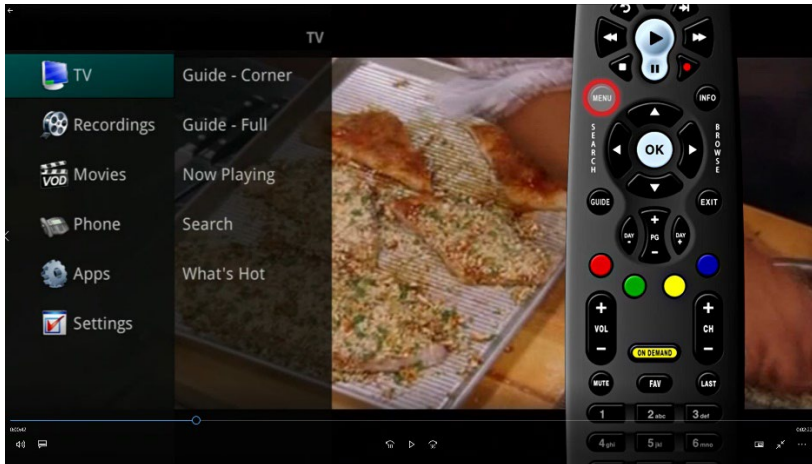

- a. Click the "menu" button

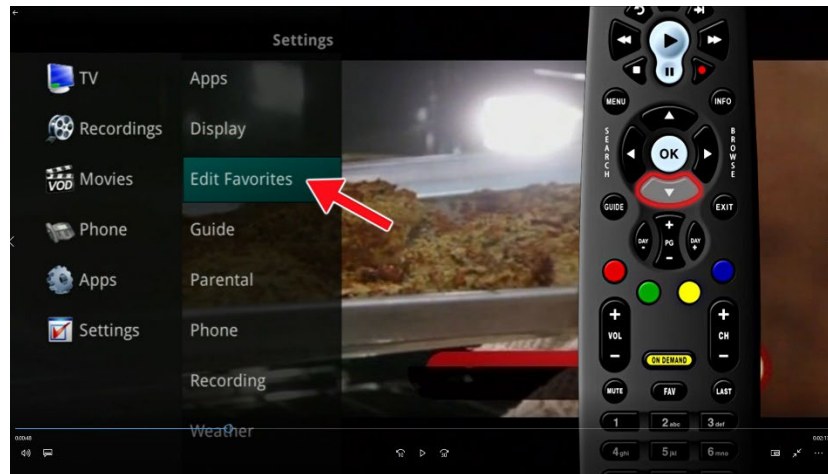

- b. Scroll down to "Settings", arrow to the right, click "Edit Favorites"

- c. You will be in a new list, scroll down to the channels you want to select



- i. To select hit "Ok"
- ii. The channel that has been selected will have a checkmark in the box



- iii. After completion of channels in the list, hit the "blue" button
- iv. Use the arrow keys and hit "Ok" to select letters in order to name the list

- v. When completed arrow down and hit click “Ok” on the submit button on the screen



 
- vi. To leave the favorites, menu click the “exit” button

- 3. To make changes to the favorites list, “hit” the green button on your remote



- a. Then you can discard changes, rename list, save list, delete list, or invert list

- 4. Access a favorites list for surfing

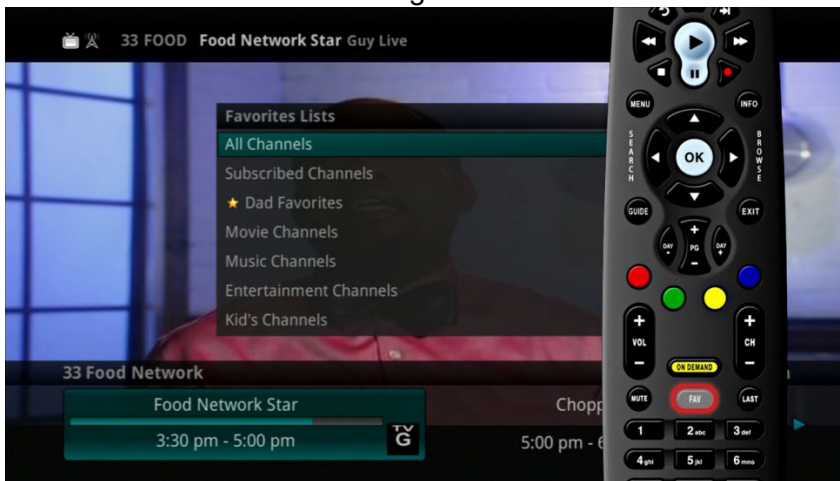


a. Select the "Fav" button on the remote



- i. All favorites will display
- ii. Arrow down to the list you want to use and hit "Ok"



 - iii. The favorites list will pull up on the bottom, you can now browse your favorite list that you selected.

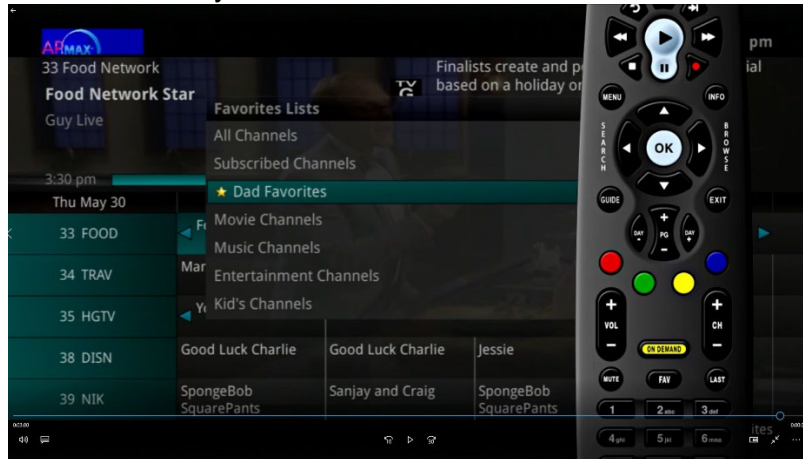

- b. When viewing the program guide, you can hit “fav” and it will pull up your favorites lists