

 
My Settings

1. Settings Menu




- a. Press “menu”, scroll down to “Settings”
 - i. You Should See
 - ii. Apps
 - iii. Display
 - iv. Edit Favorites – Covered in “Working with Favorites” video/info guide
 - v. Guide
 - vi. Parental
 - vii. Phone – Refer to the “Phone Menu” for more information on “Phone”
 - viii. Recording – Please refer to “Manage Your Recordings” video/info guide
 - ix. Weather

2. Display Settings – Use arrow buttons to see available choices

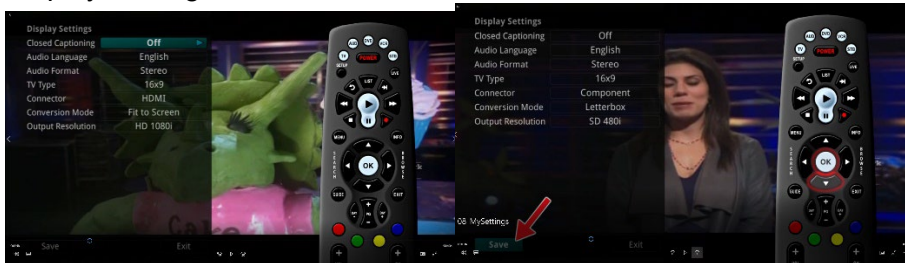

- a. Closed Captioning
- b. Audio Language
- c. Audio Format
- d. TV Type – HD TV 16x9; Regular TV 4x3
- e. Connector
- f. Conversion Mode
- g. Output Resolution
 - i. All these are typically set at time of installation & left alone
 - ii. Highlight Save & click “ok” to save any changes


3. Guide Settings

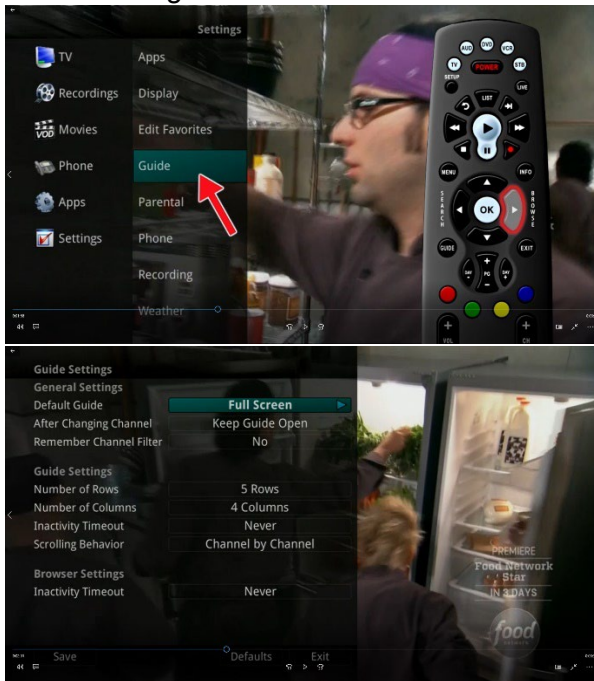

a. General Settings


- i. Default Guide – Full Screen or corner screen
- ii. After Changing Channel – Should Guide stay open or close
- iii. Remember Channel Filter – Will remember when you set a favorite list and keep you in the list

 b. Guide Settings

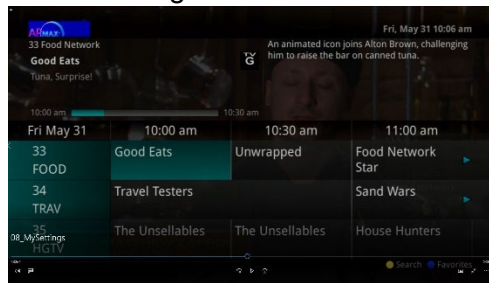

- i. Number of Rows – Less will have larger text on the screen
 - ii. Number of Columns
 - iii. Inactivity Timeout- Will wait for a key to be pressed if you hit a button taking you to another menu
 - iv. Scrolling Behavior – Scroll by Channel or Page by Page
- #### c. Browser Settings
- i. Inactivity Timeout

4. Recording Settings

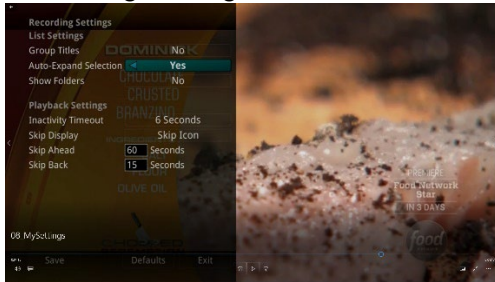

- a. List Settings
 - i. Group Titles
 - ii. Auto-Expand Selection
 - iii. Show Folders
- b. Playback Settings
 - i. Inactivity Timeout
 - ii. Skip Display
 - iii. Skip Ahead
 - iv. Skip Back