


Parental Controls


1. Click “menu”, scroll to “Settings”, scroll to “Parental”, click “OK”

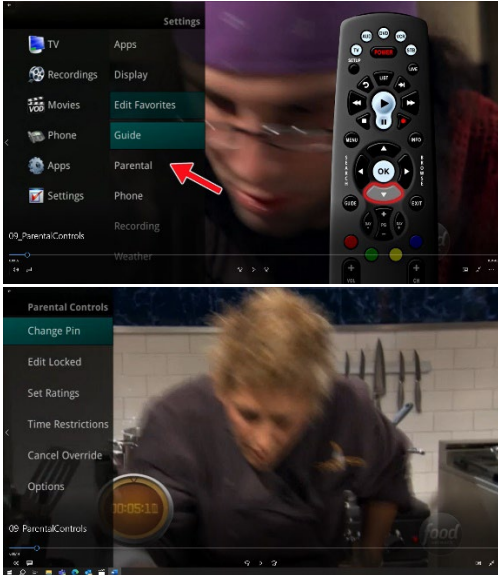


2. Settings Menu



- a. Change Pin
 - i. Enter Old Pin
 - ii. Create New Pin
- b. Edit Locked – Allows you to lock specific channels

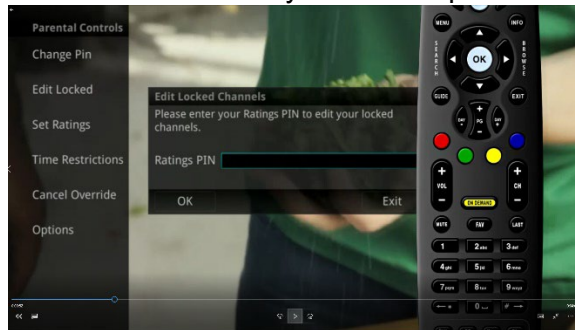

i. Must enter Ratings Pin to enter

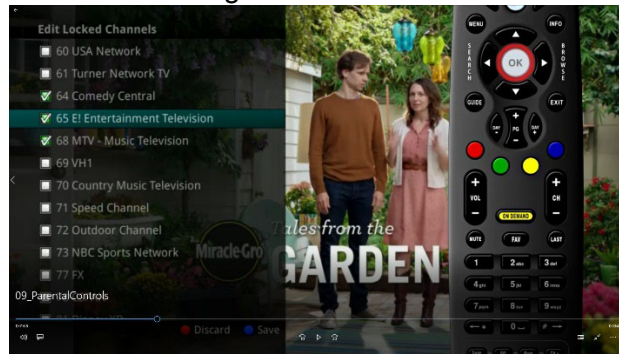


ii. Then it will display your locked channels

1. To Lock channels: scroll to the channel you want to lock, hit "ok"
2. To Unlock channels: highlight locked channel, hit "ok"


c. Set Ratings

i. Must enter Ratings Pin to enter

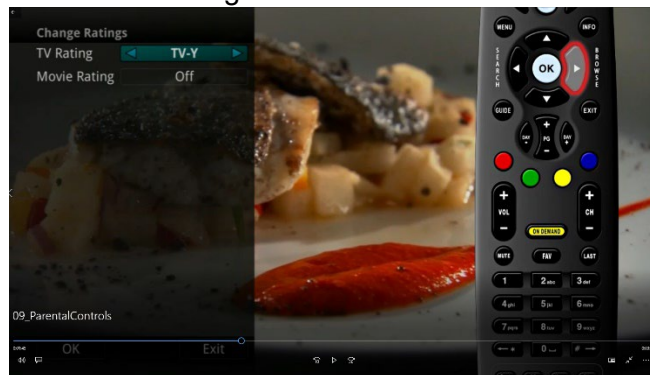


ii. TV Rating – Anything above that setting will need a PIN to be entered in order to watch


iii. Movie Rating

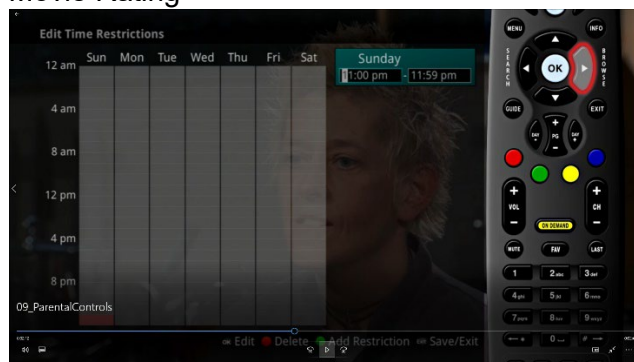

d. Time Restrictions – Television access requires a pin

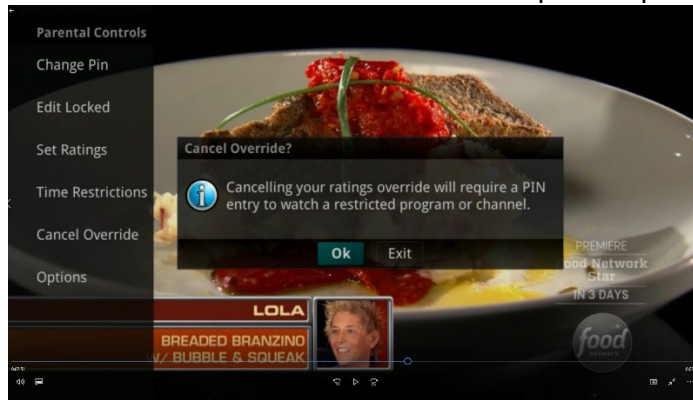


e. Cancel Override – cancels rating and time restrictions for a period of time

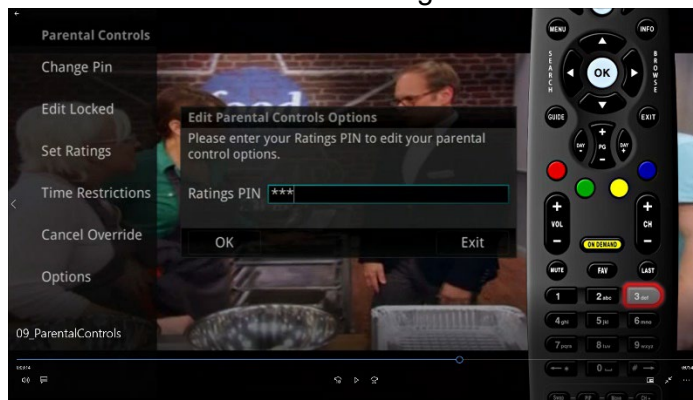

f. Options – Requires Pin to update or adjust any Parental Control Settings


i. Show Locked Channels

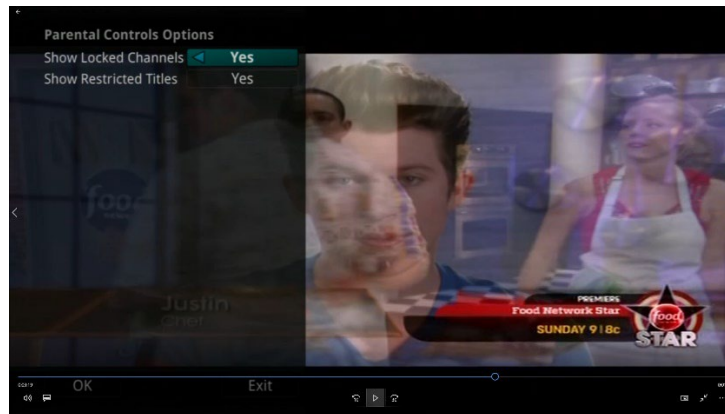

ii. Show Restricted Titles

1. Will remove these from the Program Guide

3. Watch a channel beyond parental rating settings

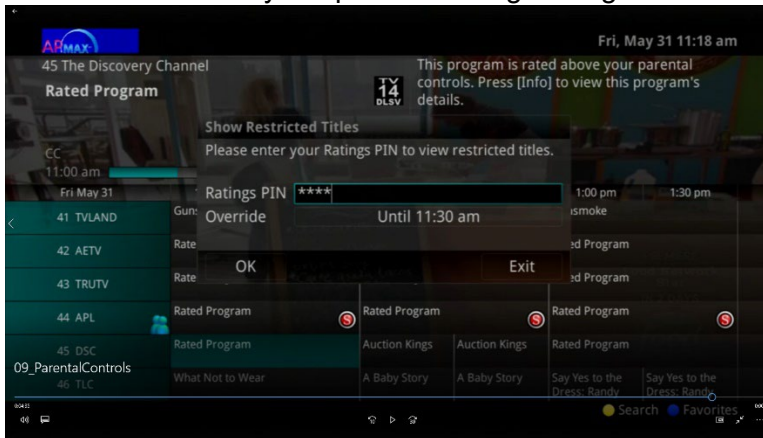

- a. Watch a show blocked by parental settings
 - i. Enter ratings pin to override – can set a time
 - ii. Entered invalid pin, select “Last” to go back to the last channel you were watching